

FASEN YHDISTELMÄSÄÄTIMEN KÄYTTÖ KIUKAAN JA INFRAPUNALÄMMÖN SÄÄTÖÖN

Tässä lyhyt versio siitä miten Fasel-säätimellä hoidetaan kiukaan ja infrapunalämmön säätö.

Alla olevassa kuvassa on väritetty tarvittavat säätimet.

5 = Kiuas - säätö

Vihreä valo näyttää säätimen asennon

- Valo ei pala = säätöä ei ole valittu
- Valo vilkkuu kun kiuassäätöä on painettu

Kun valo vilkkuu:

- Säätöä voidaan tehdä
- Säädin voidaan panna pois päältä painamalla 8/9 nappia
- Vihreä valo syttyy kun painaa Kiuas - säätö nappia

Kun valo palaa

- Kiuas säätö on päällä
- valo alkaa vilkkua kun kiuas säätö nappia painaa uudelleen

INFRAPUNA - säätö (7)

Vihreä valo näyttää säätimen asennon

- Valo ei pala = säätöä ei ole valittu
- Valo vilkkuu kun INFRAsäätöä on painettu

Kun valo vilkkuu:

- Säätöä voidaan tehdä
- Säädin voidaan panna pois päältä painamalla 8/9 nappia
- Vihreä valo syttyy kun painaa INFRA - säätö nappia

Kun valo palaa

- INFRAsäätö on päällä
- valo alkaa vilkkua kun INFRA säätö nappia painaa uudelleen

5.2 Operating and display elements

5.2.1 FCU4x00 design and FCU4x00 design glass

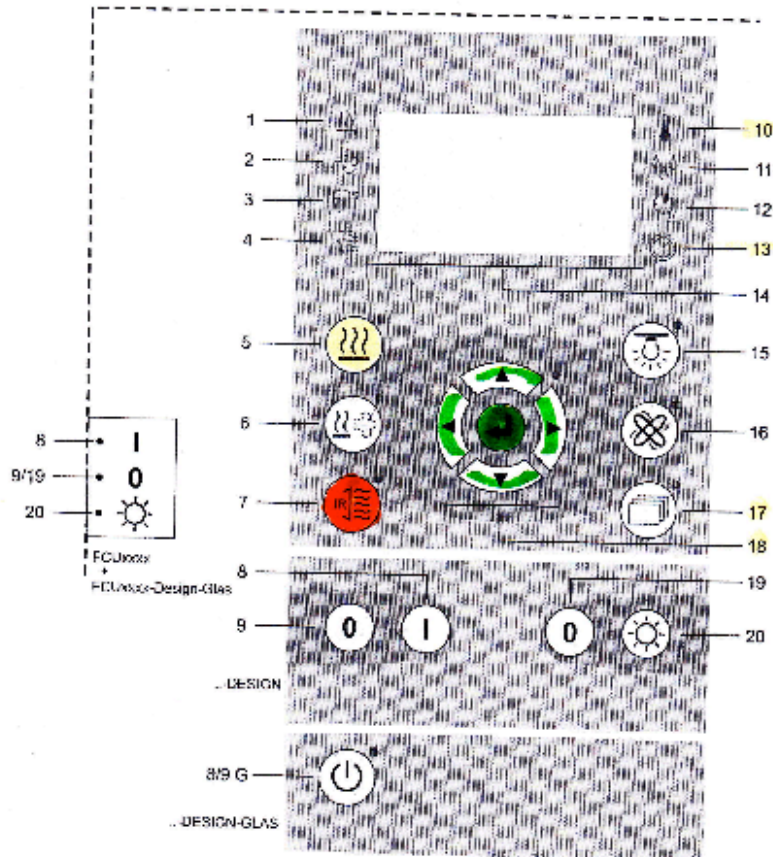


Fig. 2: Operation FCU4x00 design and FCU4x00 design glass view

- | | | | |
|---|--|----|--|
| 1 | Status display "Heater" | 10 | "Set temperature" symbol |
| 2 | Status display "Evaporator" | 11 | "Set humidity" symbol |
| 3 | Status display "Drying function" | 12 | "Set or remaining heating time" symbol |
| 4 | Status display "Infrared heating system" | 13 | "Set start time" symbol |
| 5 | "Sauna mode" key | 14 | Display |
| 6 | "Sauna mode with humidity" key
(only FCUx200 and FCUx400) | 15 | "Cabin light" key |
| 7 | "Infrared mode" key (only FCUx400) | 16 | "Fan" key |
| 8 | Control unit ON (only design) | 17 | "Basic settings" key |
| 9 | Control unit OFF (only design) | 18 | Navigation keys |
| | | 19 | Cleaning light OFF (only design) |
| | | 20 | Cleaning light ON (only design) |

INFRAPUNALÄMMÖN JA PÄÄLLÄOLOAJAN SÄÄTÖ

Kun infrapunasäätö on valittu, hae nuolinäppäimillä LÄMPÖTILAN SÄÄTÖ.

Valitse lämpötilaksi esim. 57 astetta, jolla on hyvä testata ainakin aluksi saunaa.

Jos se tuntuu liian kuumalta tai kylmältä, muuta säätöä.

Säädä myös jäljellä oleva lämitys aika, eli aika, jonka jälkeen laite katkaisee lämmityksen automaattisesti. SAUNAN lämmitysaikaa voisi varata 30 minuuttia ja saunomisaikaa 60 minuuttia, jolloin jäljellä oleva saunomisaika tulisi säätää 90 minuuttiin.

6.5 Adjust "Infrared" mode (only FCU3400 and FCU4400)



NOTE!

There are two menu navigations available for the control unit. All the menus are displayed only in the "Professional" menu. These menus are indicated accordingly in this chapter. If these menus are not displayed, your control has been set to the "Small" menu. → Also see page 48

The control unit is turned on.

1. Press the key (infrared mode) if required. The lamp next to the key must flash or light up.
2. Following view is displayed:

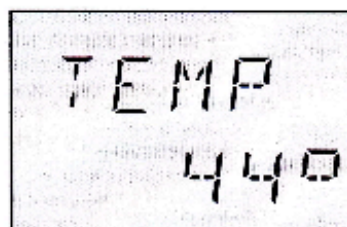
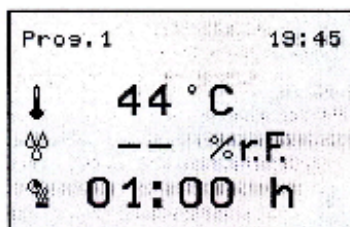


Fig. 6: "Infrared" view (example)

3. Press the key.
4. The symbol (adjust the temperature) lights up.
5. Adjust the temperature if necessary. → See page 26, chapter 6.5.
6. Press the key.
7. Menu sel "base temperature" (at FCU3xxx *TEMP.0*) view is displayed
8. Adjust the base temperature if necessary. → See page 26, chapter 6.5.
9. Press the key.
10. The symbol (adjust heating / remaining heating time) lights up.
11. If the lamp next to the mode key flashes, the heating time can be adjusted. If the lamp stops flashing, the remaining heating time can be adjusted. → See page 26, chapter 6.5.
12. Press the key.
13. Menu option "Professional": "Light brightness" view is displayed.
→ See page 29, Fig. 8.
14. Press the key.
15. Menu option "Professional": "Fan speed level" view is displayed.
→ See page 29, Fig. 9.
16. Press the key.
17. Optional: "Adjust colour light mode" view is displayed.
→ See page 31, Fig. 11.